

Overview

Device Buttons and Indicators

Front View



POWER LED
5GHz Network
2.4 GHz Network

Back View



Ethernet Ports 1&2
WPS Button
RESET Button
POWER

Status Check via LED

When the 5GHz LED indicator turns RED, it means your Mesh devices are out of range. They are either positioned too far apart or obstructed.



Move your Mesh devices closer to each other or realign to avoid obstacles until the 5GHz LED indicator turns GREEN.



For troubleshooting, please use the Askey WiFi Mesh Apps.

ASKEY Computer Corporation
www.askey.com
XXXX-XXXXXX



Starter Guide




1

Before You Start


A Check that you have



Mesh Device

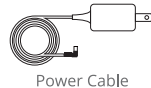

Power Cable

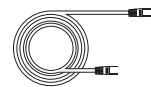

Ethernet Cable

B Locate the QR Code at the bottom of the device; you will be asked to scan it during installation.



QR Code

2

Download & Install the Askey WiFi Mesh App



The Askey WiFi Mesh App is available for iOS® or Android™.

Simply scan the QR Code below to download now!



3

Launch the App and Follow the Installation Instructions

