

AC1900 Wireless Router

Specifications



Supported Service	Fibre Broadband
Wireless Connection Mode	<i>*Dependent on broadband subscription</i> <ul style="list-style-type: none"> • B Mode: Up to 11Mbps • G Mode: Up to 20Mbps • N (2.4GHz) Mode: 40-70Mbps • N (5GHz) Mode: 70-120Mbps • AC Mode: 70-230Mbps
Frequency	2x2 11n 2.4GHz (Enabled by default) 3x3 11ac 5GHz (Enabled by default)
Hardware Interface	1x Gigabit WAN 4x Gigabit LAN 1x USB 2.0 WPS Button LED Button Reset Button

Warranty 1-for-1 exchange (RMA) at Whiz Communications Pte Ltd

Warranty Period: 1 Year

Address: 150 Kampong Ampat, #04-02 Singapore 368324

Office Hours: 10am to 5pm (Weekdays excluding Eve of Public Holidays and Public Holidays)

Manage Router Settings

1. Remove all LAN cables from the AC1900 Wireless Router and restart the Wireless Router.
2. Connect an Ethernet cable directly from your PC/laptop to any of the LAN ports on the Wireless Router.
3. Configure your PC/laptop internet setting to DHCP.
4. Launch the web browser and enter **192.168.1.254** into browser's address bar.
5. Login with the admin username and password printed on the back of the Wireless Router
6. Follow the on-screen instructions to change login password.

Manage WiFi Settings

1. Launch the web browser and enter **192.168.1.254** into browser's address bar.
2. Login with the admin username and password printed on the back of the Wireless Router (or use the admin password you have set during initial set up).
3. Click on the **Wireless** tab/button on the left menu and enter the admin password [rinted on the back of the Wireless Router (or use the admin password you have set during initial set up).