


SETUP FOR ALIVE ROUTER AC-1200R AS AP MODE

1. INSTALLATION STEPS

Installation steps required for the AC-1200R before it can work properly in your network.

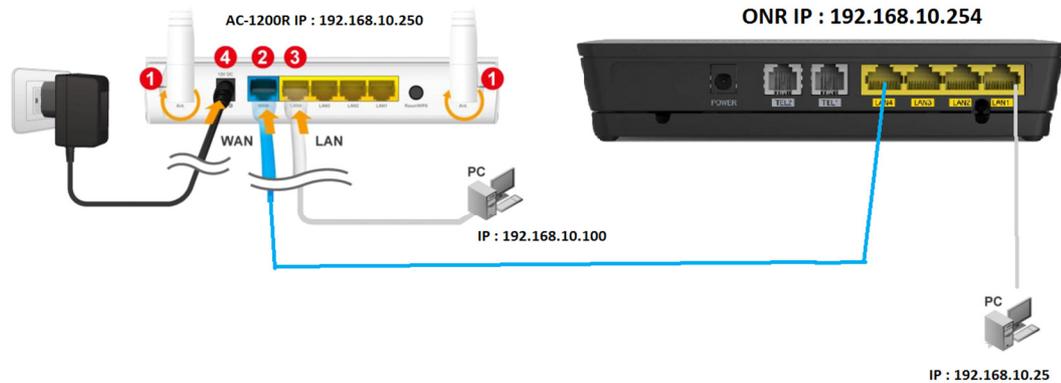

1. Install antennas into the AC-1200R
2. Connect **ONR LAN port** into the **WAN port of the AC-1200R**
3. Connect PC/Laptop into LAN port of AC-1200R (Standalone)
4. Connect Power jack for to the power port for both AC-1200R
5. ON power for AC-1200R and wait for 60 sec .
6. To access AC-1200R .Then open the browser on your PC and type in “192.168.0.250” to reach the web management
7. Please proceed to AC-1200R configuration.

2. AC-1200R Configuration


Important Before you start Do not connect Airlive router to ONR. Please note password and SSID are case sensitive.

- The default IP address is: **192.168.0.250** Subnet Mask: **255.255.255.0**
- When using Web UI, the login as follow:
 - User name: **admin**
 - Password: **airlive**
- The default radio mode for Radio 1 is **802.11ac/n**
- The default radio mode for Radio 2 is **802.11g/b/n**
- The default SSID for Radio 1 is: **AirLive**
- The default SSID for Radio 2 is: **AirLive 5G**
- The default wireless mode is : **Dual Band Router Mode**
- After power on, please wait for 2 minutes for AC-1200R to finish boot up
- Please remember to click on “Apply” for new settings to take effect

3. Prepare your PC

The AC-1200R can be managed remotely by a PC/Laptop through either wired or wireless network. The default IP address of the AC-1200R is **192.168.0.250** with a subnet mask of 255.255.255.0 This means the IP address of the PC should be in the range of 192.168.0.1 to 192.168.0.253.

The default mode of AC-1200R is "Dual Band Router". In this mode ,the AC-1200R 's DHCP server is turn ON . therefore, your PC can get IP automatically from AC-1200R. You just need to set your PC/laptop to "Obtain IP address automatically" on the TCP/IP setting. By default , windows already do this so you do not need to change.

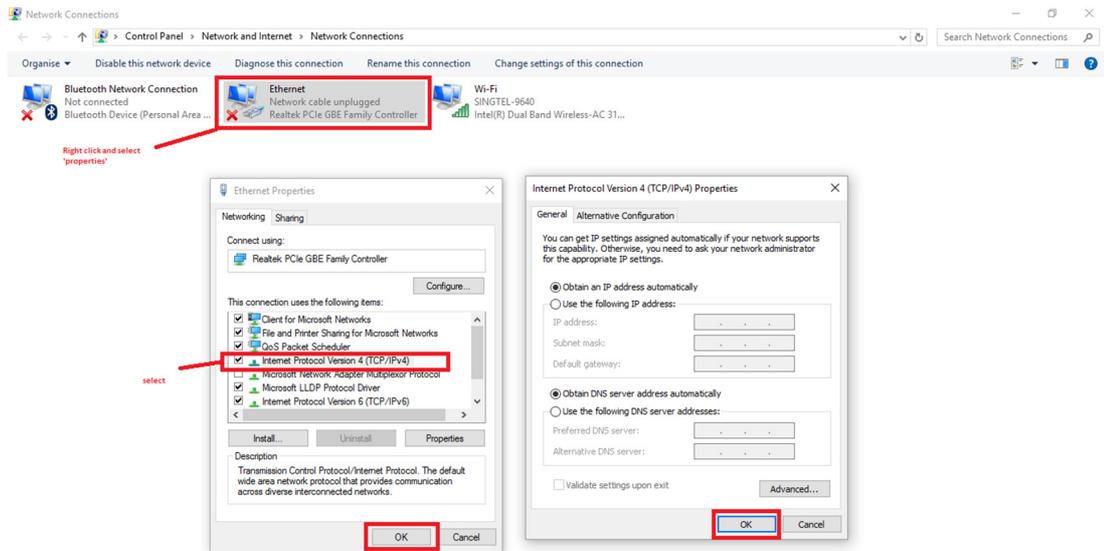

|

4 Login

PC/ Notebook Connect network cable to AC-1200R standalone for configuration.

After the procedure above , the login username and password is required for AC-1200R

Please type in the user name and password

User name : admin

Password : airlive

SETTING AC-1200R LAN IP ADDRESS

Select "General Setup" as shown below

The screenshot shows the Air Live AC-1200R web interface. The top navigation bar includes 'Operation Mode', 'General Setup' (highlighted with a red box), 'Status', and 'Tools'. The left sidebar contains menu items: System, WAN, LAN (highlighted with a red box), 2.4GHz Wireless, 5GHz Wireless, QoS, NAT, and Firewall. The main content area is titled 'LAN' and contains the following configuration options:


- LAN IP**
 - IP Address: 192.168.0.250 (highlighted with a red box, with a note: "Change IP to 192.168.10.250")
 - Subnet Mask: 255.255.255.0
 - 802.1d Spanning Tree: Disable
 - DHCP Server: Enable
- DHCP Server**
 - Lease Time: OneDay
 - DHCP Client Start IP: 192.168.0.1
 - DHCP Client End IP: 192.168.0.150
 - Domain Name: (empty field)
- Static DHCP Lease Table**
 - It allows 16 entries only.
 - Buttons: APPLY (highlighted with a red box), CANCEL
 - Table with columns: NO., MAC Address, IP Address, Select
 - Buttons: Delete, Delete All
- Enable Static DHCP Leases**
 - MAC Address: (empty field)
 - IP Address: (empty field)
 - Buttons: Add, Clear

After completed the LAN address setup Select "APPLY" the airlive router will take a minute to reboot.

Link network cable from ONR LAN port to Airlive router WAN port


Browser key IP address **192.168.10.250**

Proceed to Operation Mode

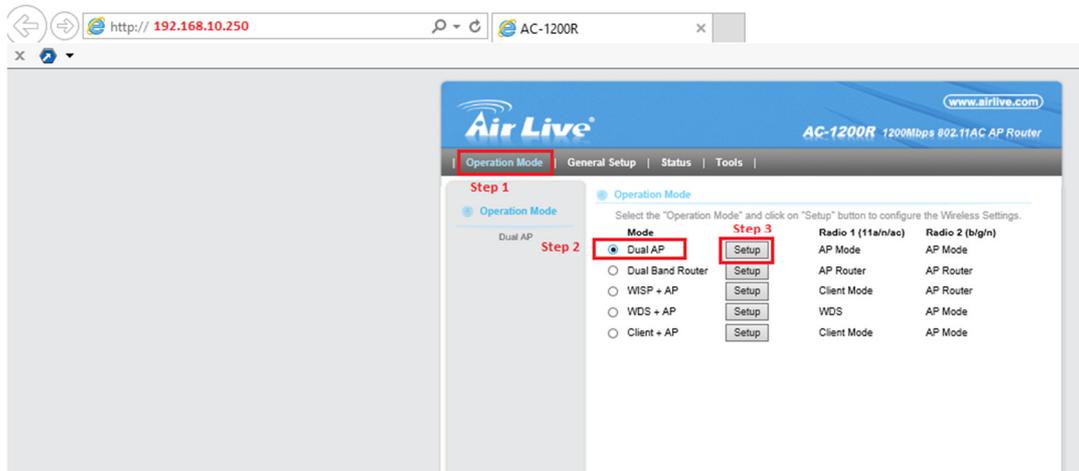

After that Operation Mode page appear

Select “Dual AP” Mode and click “SETUP” to configure wireless setting

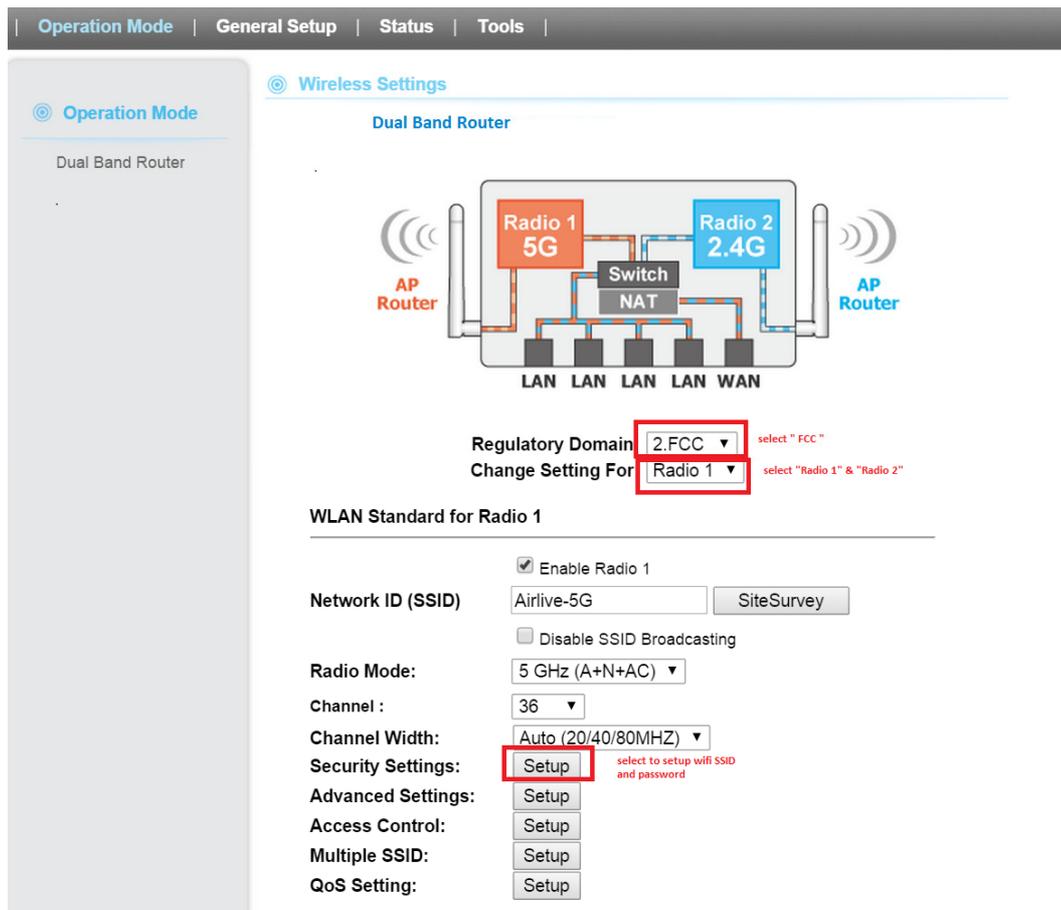

SECURITY SETTING Both 2.4G and 5G :For SSID and wifi security

To change SSID

The screenshot shows the 'General Setup' page for the 'Basic Settings' of the wireless connection. The left sidebar has '2.4GHz Wireless' and 'Basic Settings' highlighted with red boxes. The main content area shows the following settings:

- Mode: Access Point
- Band: 2.4 GHz (B+G+N)
- SSID: (highlighted with a red box and labeled 'Change SSID')
- Channel Number: 11
- Associated Clients: ShowActiveClients

At the bottom right, there are 'APPLY' and 'CANCEL' buttons, with 'APPLY' highlighted by a red box. A red arrow points to the 'Basic Settings' link in the sidebar with the word 'select'.

To Change Password for wifi

The screenshot shows the 'General Setup' page for the 'Security Settings' of the wireless connection. The left sidebar has '2.4GHz Wireless' and 'Security Settings' highlighted with red boxes. The main content area shows the following settings:

- Encryption: WPA pre-shared key
- WPA Unicast Cipher Suite: WPA2(AES) (selected)
- Pre-shared Key Format: Passphrase
- Pre-shared Key: (highlighted with a red box and labeled 'to change password')

At the bottom right, there are 'APPLY' and 'CANCEL' buttons, with 'APPLY' highlighted by a red box.